




## PAH-1000-II HEATER INSTALLATION

THE FOLLOWING INSTRUCTION SHEET CONTAINS ALL THE INFORMATION NECESSARY TO SET-UP AND OPERATE YOUR NEW PHOENIX HEATER.

**ALL WIRING AND INSTALLATION MUST CONFORM TO LOCAL, NATIONAL, AND REGIONAL REGULATIONS.**

### WIRING:

The PAH-1000-II Heater contains solid state circuitry and has been prewired at the factory, but when it becomes necessary to replace one of the heating elements, the circuitry must be wired as indicated in the drawing to the right.

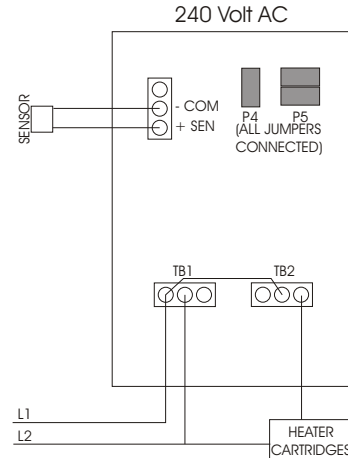

### SYSTEM SETTINGS:

From time to time it may become necessary to reset or change the system settings. This is done by following the steps below and adjusting the display according to the chart.

- 1 Press and hold MENU until the display changes to flashing SP.
- 2 Press the UP/DOWN arrows until the desired function is displayed.
- 3 Press MENU to display the function's current value.
- 4 Press the UP/DOWN arrows until the desired value is displayed
- 5 Press MENU to save the new value. Display returns to Temperature.

|     |                            |   |                     |
|-----|----------------------------|---|---------------------|
| dIF | Temperature Differential   | 3 | Degrees             |
| ASd | Time Between Cycles (sec.) | 0 | Minutes             |
| OFS | Temperature Offset         | 0 | Degrees             |
| SF  | Sensor Failure Mode        | 0 | Output De-energized |

### TEMPERATURE SETPOINT ADJUSTMENT:

- 1 Press and hold MENU until the display changes to flashing SP.
- 2 Press MENU to display the function's current value.
- 3 Press the UP/DOWN arrows until the desired setpoint is displayed
- 4 Press MENU to save the new value. Display returns to Temperature.